Installation Details

Silt Sock Properly Installed

Flow greater than 45° in relation to sock

Upstream Silt Sock placed
in front of next sock with 24" overlap.

Flow less than 458 in relation to sock

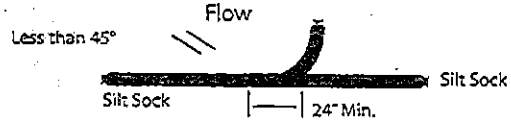

Install another sock or use
the upstream sock set 45° to
90° from flow direction with
24" overlap.
Curl tial of upstream sock out to
slow flow along face of sock.
Overlap next sock by 24".

REFERENCE ANGLES

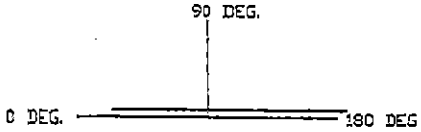

Silt Sock Repair

Silt Sock repair for hole or tear greater than one foot.

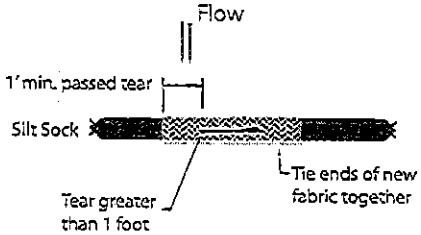

Piece of fabric wrapped around the damaged
area and tied on the downstream side.

Silt Sock repair for hole or tear less than one foot.

Damaged areas sewn or tied shut. Rotate sock
placing repaired area on downstream side.

Silt Sock

EROSION CONTROL PRODUCTS

www.siltsock.net
608-438-7625